







BC-IM4  BC3

GR 1-2  


GR 3-4 

GR 5-6 







GR 7-8 

 PGM

**Gain and Routing:**

- MIC:** 28-70 dB knob, PAD button
- LINE:** 10-20 dB knob, P48 button, LINE button
- AUX1-4:** 0-6 knob, PRE buttons, CH-OUT button
- LEVEL:** 0-6 knob, CUE button, POST button
- HPF:** 40-300 Hz knob, N-MINUS button
- THR:** 10-30 dB knob, AUTOGAIN ON button
- REL:** 0.1-1 knob, ATT knob
- RAT:** 1.1-1.7 knob, EXP knob
- LIM:** 1-8 knob, EXP-ON button
- HI:** 4-15 knob, DYN button
- MID2:** 4-15 knob, EQ button
- MID1:** 0.06-0.25 knob, INS button
- LOW:** 4-15 dB knob, PAN button
- PAN:** L-R knob, 

**Visual Indicators:**

- GR dB:  1,  3,  5, 10, 20
- FDR OPEN: 
- PK: 
- PS: 

**Channel Status:** CH 24 ON

**START** **PFL**

**Level Meter:** 15 dB, 10, 5, 0, 5, 10, 15, 20, 25, 30, 35, 40, 50, 60, 75, ∞

**Headphones:** 